


“Nothing happens”

If the motor does not start when you switch on the power, we ask you to:

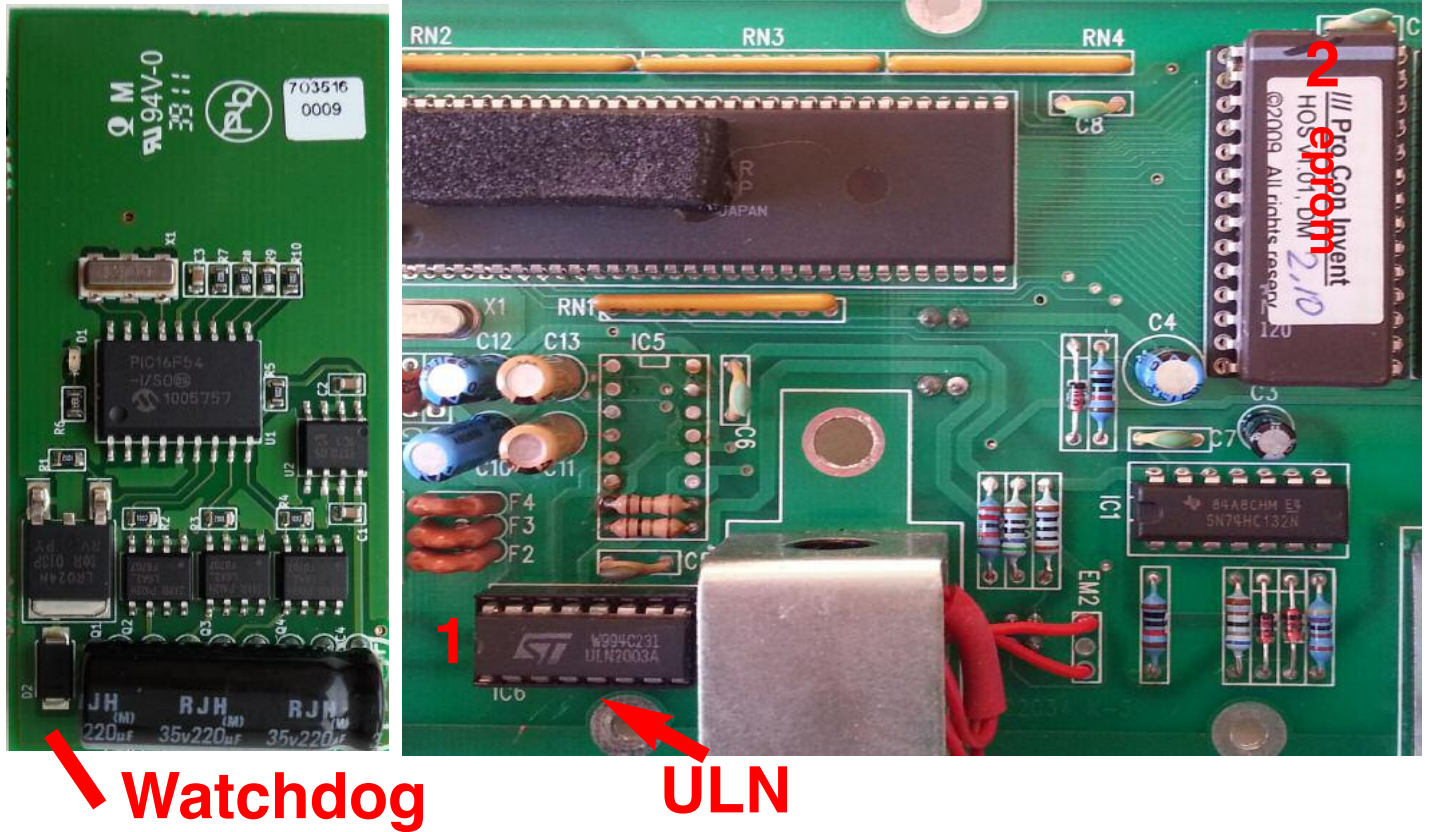

Watchdog

ULN

Remove the eprom (marked 2 in the illustration). Try to run a duplication while the eprom is removed. You should hear a clicking sound from the motor. If the motor does click, then the motor is OK and you should suspect that the eprom or watchdog is faulty. c.f. the [Watchdog memo](#).

If the eprom and motor prove to be OK, it could be the processor and/or RAM (or something else on the PCB). i.e. you should “Report Problem” via the help menu.